

1. Features


- Firmware for light dimmer
- Voltage control in 255 steps (0-255)
- 4 defined dimmer characteristics
- Possibility to program user defined characteristic
- Adjustable minimum and maximum values
- Last state memory
- Adjustable dimming time for each channel
- 10 control instructions
- 3 blocking instructions
- 1 timer for instruction execution delay 1s-24h
- Allows defining up to 128 CAN messages which can indirectly control the module
- Settable power up states
- Uptime counter
- Health check monitor
- Transmit (42 messages) and receive (42 messages) FIFO buffers



2. Compatibility

- Firmware for **UNIV 3.6.0.x** module
- Firmware can be uploaded into processor with bootloader version 3.1 or compatible.

3. Firmware version

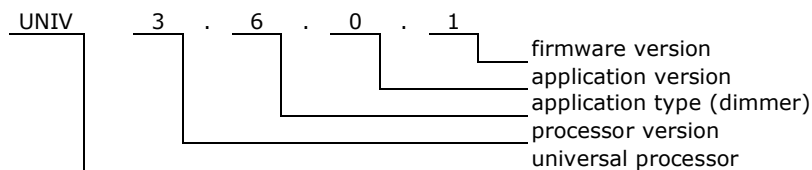

4. Communication Frames (messages)

4.1. Dimmer message

The module sends message to the bus, when the dimmer state changes.

Table 1. Dimmer frame (0x306)

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	3 2 1 0	Node Nr	Group Nr	0xFF	0xFF	CHANNEL	STATUS	0xFF	INSTR1	INSTR2	TIMER

0x306	- dimmer frame										
3	-	- not used flag, read as "0"									
2	-	- not used flag, read as "0"									
1	-	- not used flag, read as "0"									
0	RE	- response flag, flag is equal "1" if node was requested. If flag is equal „0" it means that status of output has just changed.									

Node Nr - message sender node number
Group Nr - message sender group number

CHANNEL - output channel (always 0x01 in this device)

STATUS - current status of output 0x00 – 0xFF

INSTR1 - instruction that is waiting for execution, or 0xFF if none instruction

INSTR2 - second byte of instruction that is waiting for execution, or 0xFF

TIMER - delay value of waiting instruction, or 0x00 if none waiting

Table 2. Dimmer error frame

The module sends message to the bus, when the dimmer error changes.

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	0x0	Node Nr	Group Nr	0xFF	0xFF	0xF0	ERROR	0xFF	0xFF	0xFF	0xFF

0xF0 - error frame

ERROR 0x00 - <00000000> - no error
0x01 - <00000001> (bit 0) - 230V mains problem
0x02 - <00000010> (bit 1) - overheating

Table 3. Dimmer transistor conduction time

The frame is sent only in response to STATUS REQUEST

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	0x1	Node Nr	Group Nr	0xFF	0xFF	0xFE	COND1	COND0	0xFF	0xFF	0xFF

0xFE MOSFET - transistor conduction time frame

COND - COND1*256 + COND0 - transistor conduction time frame in mains half sine wave (in microseconds)

Table 4. Mains frequency frame

The frame is sent only in response to STATUS REQUEST

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	0x1	Node Nr	Group Nr	0xFF	0xFF	0xFF	FREQ1	FREQ0	0xFF	0xFF	0xFF

0xFF - mains frequency frame

FREQ - FREQ1*256 + FREQ0 - mains sine wave half period time (value in microseconds)

4.2. Status request

Status of module can be checked by sending from computer STATUS REQUEST frame (0x109) (Table 5).

Table 5. STATUS REQUEST frame (0x109).

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x109	0x0	COMP ID1	COMP ID2	0xFF	0xFF	Node Nr	Group Nr	0xFF	0xFF	0xFF	0xFF

0x1090 - STATUS REQUEST frame

COMP ID1 - computer identifier (must be unique on the network)

COMP ID2 - computer identifier (must be unique on the network)

Node Nr - node number of requested module

Group Nr - group number of requested module

0xFF - inessential data

As response the module will send dimmer frames. The meaning of bytes is the same as in Table 1,2,3,4.

Table 6. Response to STATUS REQUEST

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	0x1	Node Nr	Group Nr	0xFF	0xFF	CHANNEL	STATUS	0xFF	INSTR1	INSTR2	TIMER

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	0x1	Node Nr	Group Nr	0xFF	0xFF	0xF0	ERROR	0xFF	0xFF	0xFF	0xFF

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	0x1	Node Nr	Group Nr	0xFF	0xFF	0xFE	COND1	COND0	0xFF	0xFF	0xFF

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x306	0x1	Node Nr	Group Nr	0xFF	0xFF	0xFF	FREQ1	FREQ0	0xFF	0xFF	0xFF

4.3. Uptime request

Table 7. UPTIME REQUEST (0x113).

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x113	0x0	COMP ID1	COMP ID2	0xFF	0xFF	Node Nr	Group Nr	0xFF	0xFF	0xFF	0xFF

0x1130 - UPTIME REQUEST frame

COMP ID1 - computer identifier (must be unique on the network)

COMP ID2 - computer identifier (must be unique on the network)

Node Nr - node number of requested module

Group Nr - group number of requested module

0xFF - inessential data

Table 8. Response to UPTIME REQUEST (0x113).

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x113	0x1	Node Nr	Group Nr	0xFF	0xFF	0xFF	0xFF	UPTIME3	UPTIME2	UPTIME1	UPTIME0

0x1131 - Response to UPTIME REQUEST frame

Node Nr - node number on the network

Group Nr - group number of the node on the network

UPTIME - $(UPTIME3*256^3+UPTIME2*256^2+UPTIME1*256^1+UPTIME0*256^0)$ in seconds

4.4. Health check request

Table 9. HEALTH CHECK - STATUS REQUEST (0x115).

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x115	0x0	COMP ID1	COMP ID2	0x01	0xFF	Node Nr	Group Nr	0xFF	0xFF	0xFF	0xFF

0x1150 - HEALTH CHECK REQUEST frame

COMP ID1 - computer identifier (must be unique on the network)

COMP ID2 - computer identifier (must be unique on the network)

0x01 - status request

Node Nr - node number of requested module

Group Nr - group number of requested module

0xFF - inessential data

As response the module will send two frames (Table 10).

Table 10. Response to HEALTH CHECK - STATUS REQUEST (0x115).

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x115	0x1	Node Nr	Group Nr	0x01	RXCNT	TXCNT	RXCNTMX	TXCNTMX	CANINTCNT	RXERRCNT	TXERRCNT

0x1151 - Response to HEALTH CHECK REQUEST frame

Node Nr - node number on the network

Group Nr - group number of the node on the network

0x01 - frame 1 (current values)

RXCNT - current level of receive FIFO buffer

TXCNT - current level of transmit FIFO buffer

RXCNTMX - maximum level of receive FIFO buffer since power up

TXCNTMX - maximum level of transmit FIFO buffer since power up

CANINTCNT - number of CAN interface restarts since power up

RXERRCNT - current receive errors register

TXERRCNT - current transmit errors register

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x115	0x1	Node Nr	Group Nr	0x02	0xFF	0xFF	RXCNTMXE	TXCNTMXE	CANINTCNTE	RXERRCNTE	TXERRCNTE

0x1151 - Response to HEALTH CHECK REQUEST frame

Node Nr - node number on the network

Group Nr - group number of the node on the network

0x02 - frame 2 (maximum values saved in eeprom memory)

RXCNTMXE - maximum ever level of receive FIFO buffer

TXCNTMXE - maximum ever level of transmit FIFO buffer

CANINTCNTE - maximum ever number of CAN interface restarts

RXERRCNTE - maximum ever receive errors

TXERRCNTE - maximum ever transmit errors

To clear maximum values saved in eeprom memory the frame shown in Table 11 must be sent. There is no response to this message.

Table 11. HEALTH CHECK - CLEAR REQUEST (0x115).

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x115	0x0	COMP ID1	COMP ID2	0x02	0xXX	Node Nr	Group Nr	0xXX	0xXX	0xXX	0xXX

0x1150 - HEALTH CHECK REQUEST frame

COMP ID1 - computer identifier (must be unique on the network)
COMP ID2 - computer identifier (must be unique on the network)

0x02 - clear request

Node Nr - node number of requested module

Group Nr - group number of requested module

0xXX - inessential data

5. Module control

The module can be controlled directly from PC, or indirectly by other modules.

5.1. Control instruction

The table below shows all instructions, which can be executed by the module. Some of them can be executed only with direct control and other with indirect control (through other modules).

Table 12. Module control instructions

Instruction	Instruction Coddng								Note	Control	
	INSTR1	INSTR2	INSTR3	INSTR4	INSTR5	INSTR6	INSTR7	INSTR8		Direct	Indirect
SET TO...	0x00	STATE	TIMER	0xXX	0xXX	0xXX	0xXX	0xXX	Sets the state of the dimmer immediately at the level specified by the byte STATE (0-255). The SOFT START feature takes 1s to turn device on and off. Instructions may be delayed if the TIMER is not zero.	√	√
TOGGLE	0x01	0xXX	TIMER	0xXX	0xXX	0xXX	0xXX	0xXX	If dimmer is on, it will be turned off. If it is off, it will be turned to the maximum or the last memorized value (if state memory is set in the configuration). Instructions may be delayed if the TIMER is not zero.	√	√
STEP DOWN BY ...	0x02	VALUE	TIMER	0xXX	0xXX	0xXX	0xXX	0xXX	Dimmer state will be reduced by the value indicated in the VALUE byte.	√	√
STEP UP BY ...	0x03	VALUE	TIMER	0xXX	0xXX	0xXX	0xXX	0xXX	Dimmer state will be increased by the value indicated in the VALUE byte.	√	√
STOP	0x04	0xXX	0xXX	0xXX	0xXX	0xXX	0xXX	0xXX	It stops instruction which is being executed eg. START or SET SOFTLY TO ...	√	√
START	0x05	0xXX	0xXX	0xXX	0xXX	0xXX	0xXX	0xXX	Instruction START begins typical control process. If within 400ms from START instruction, controller receives STOP instruction then it toggles channel's state (exactly the same as TOGGLE instruction). If after that time instruction STOP is not received then dimmer is brightened (if previous state was min or 0), or channel is dimmed (if previous state was max). It gives possibility to control with one button. If button is pressed for less than 400ms the dimmer will turn on or off. If button is pressed for longer than 400ms, then dimmer will dim or brighten.	√	√
SET SOFTLY TO...	0x06	STATE	TIMER	0xXX	0xXX	0xXX	0xXX	0xXX	Sets the dimmer state slowly to the level specified by the byte STATE (0-255). Instructions may be delayed if the TIMER is not zero.	√	√
SET MINIMUM TO...	0x07	VALUE	0xXX	0xXX	0xXX	0xXX	0xXX	0xXX	Sets dimmer minimum value. Byte VALUE (0-255).	√	√
SET MAXIMUM TO ...	0x08	VALUE	0xXX	0xXX	0xXX	0xXX	0xXX	0xXX	Sets dimmer maximum value. Byte VALUE (0-255).	√	√
SET DIMMING SPEED TO ...	0x09	VALUE	0xXX	0xXX	0xXX	0xXX	0xXX	0xXX	It sets dimming time. VALUE byte (0-255) defines time when dimmer changes its state from 0 to 255. This byte can hold value from 0 - 255 which corresponds to 1s - 256s.	√	√
ENABLE BOX	0xDD	BoxX	BoxY	0xXX	0xXX	0xXX	0xXX	0xXX	It enables chosen boxes - these boxes will be compared with next received message from the bus.		√
DISABLE BOX	0xDE	BoxX	BoxY	0xXX	0xXX	0xXX	0xXX	0xXX	It disables chosen boxes - these boxes will be passed when next message arrives from the bus.		√
TOGGLE BOX	0xDF	BoxX	BoxY	0xXX	0xXX	0xXX	0xXX	0xXX	It toggles boxes - enables when they are disabled and vice versa		√

0xXX - inessential data

BoxX	Note
0x00	- from Box 1
0x01	- from Box 2
...	
0x7F	- from Box 128

BoxY	Note
0x00	+ 0 -(and not anyone else)
0x01	+ 1 -(and 1 following)
...	
0x7F	+127 -(and 127 following)

5.2. Timer

Each channel has its own timer which can delay execution of the instruction. Delay can be chosen between 1s-24h set in TIMER register. Drawing below shows delay dependence of TIMER register.

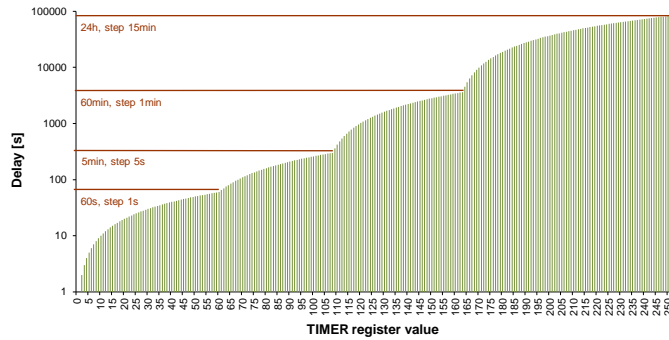


Figure 1. Delay/timer register relationship

5.3. Direct control

It is possible to control module by sending DIRECT CONTROL message. The message contains instruction, which will be executed by the module.

Table 13. DIRECT CONTROL frame (0x10A).

Frame type	Flags	Module	Group	D0	D1	D2	D3	D4	D5	D6	D7
0x10A	0x0	COMP ID1	COMP ID2	INSTR1	INSTR2	Node Nr	Group Nr	INSTR3	INSTR4	INSTR5	INSTR6

0x10A - DIRECT CONTROL frame

- COMP ID1 - computer identifier (must be unique on the network)
- COMP ID2 - computer identifier (must be unique on the network)
- Node Nr - node number of requested module
- Group Nr - group number of requested module
- INSTR1-6 - instruction to be executed (byte1)

5.4. Indirect control

Indirect control means that module will react to messages sent by other modules on the network. It depends on configuration programmed into the module boxes (memory cells).

This firmware has feature to set simple conditions of executing instruction. To do so, you can use blocking instruction (0xDD - 0xDF) shown in Table 12.

6. Configuration

Parameters that can be configured with this firmware. Configuration process can be made using HAPCAN Programmer.

6.1. Module identifier

Every module on the network must have unique identifier. The identifier is made of two bytes, module number (1 byte) and group number (1 byte).

6.2. Module description

Every module can have 16 char description, which makes easier for user (programmer) to distinguish nodes.

6.3. Dimmer channel name

The only one channel of this device can be named with 32 chars.

6.4. Power up minimum and maximum values

It is possible to set minimum and maximum values.

6.5. Power up dimming speed

This parameter defines how fast dimmer goes from value 0 to value 255. The dimming speed can be chosen between 1s and 256s with 1s step.

6.6. Power up state

It is possible to configure dimmer state at startup after power loss. At startup values can be chosen between 0 and 255 or the or the last state saved in non-volatile memory can be taken. The last state value must be unchanged for at least 6s before power failure.

6.7. Last state memory

The dimmer last state can be remembered. In this mode, when channel is being switched on, it sets to the value that was before switching off. In no state memory mode it sets to the maximum value.

6.8. Dimmer characteristics

One of five dimmer characteristics can be chosen. For the light control is it advised to choose square or incandescent curve. Only few types of LED bulbs might require "LED" curve.

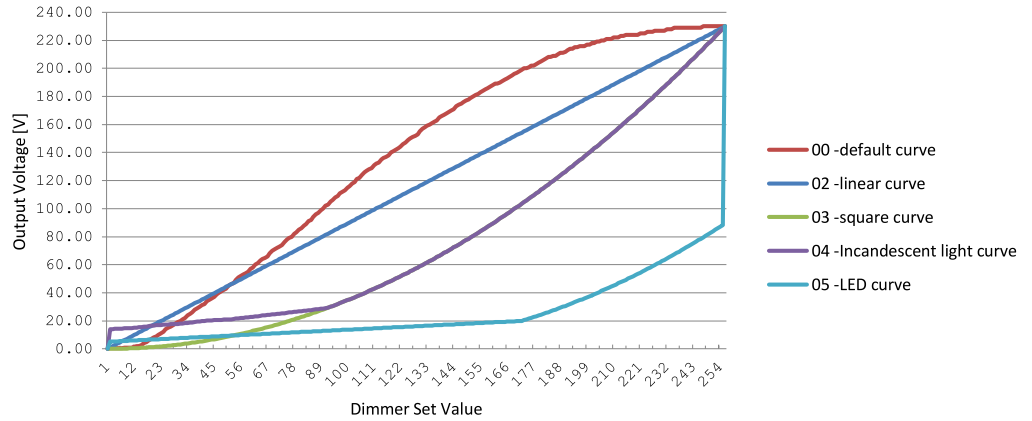


Figure 2. Defined dimmer characteristics.

6.9. User defined characteristic

When defining user characteristic it is required to set, for each dimmer value, the transistor conduction time in the half period of mains sine wave. This time must be contained within the range 0 - 9215 μs. Value equal or greater than 9215 μs means a continuous conduction of the transistor.

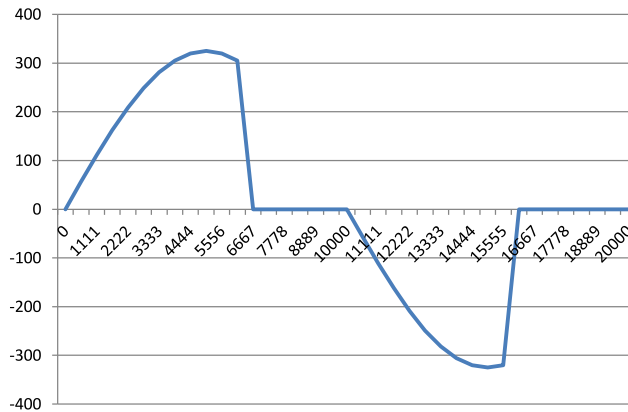


Figure 3. An example of the transistor conduction time equal 6667μs

6.10. Text notes.

Up to 1024 characters can be written into processor's memory.

6.11. Linking devices

The module has 128 memory cells (boxes). Each box can contain information about message sent by other node, and instruction which will be executed when that message is received.

7. License



HAPCAN Home Automation Project firmware, Copyright (C) 2015 hapcan.com

This program is free firmware: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.



This firmware is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this firmware. If not, see <http://www.gnu.org/licenses/gpl-3.0.html>.

8. Document version

File	Note	Date
univ_3-6-0-1a.pdf	Original version	June 2015